 



Battery Compartment

1. Unlatch and remove the battery door and insert 3 AA standard or rechargeable batteries (not included). New batteries will provide up to 30 minutes of continuous run time.
2. Match battery placement with diagram inside the battery housing.
3. Replace battery door and latch shut. When fan power is diminished, replace the batteries.

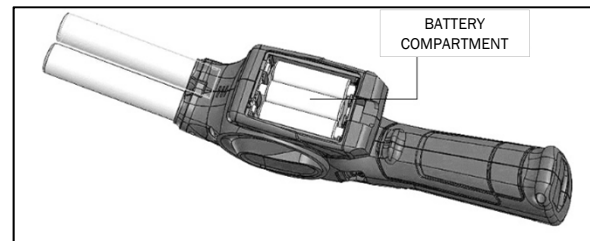



Gas Filling

 1. Adapter are not normally required when filling.
2. To refill, hold butane fuel (not included) above the tool since fuel transfer is dependent on gravity.
3. Press while holding vertically downward into center of the refill valve and apply firm pressure.
4. Stop refilling when gas reaches about 80% full.
5. Wait five minutes for the fuel to stabilize and for residual fuel to vent.

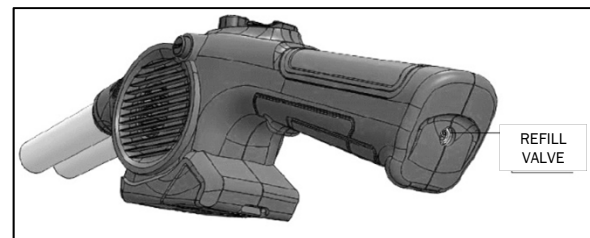





Fan Blower Operation

  1. To turn on the fan blower, push the safety switch down in the middle of the button.
2. With the switch depressed, slide the button forward to turn the power on to the blower.
3. The fan blower will continue operation when the button is in the forward position.
4. To turn the fan blower off, slide the switch back into the off position.

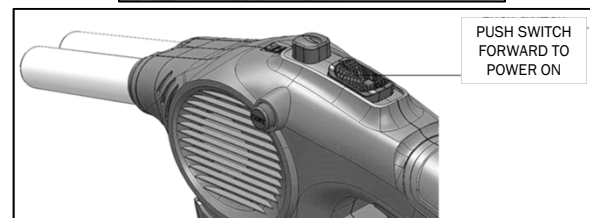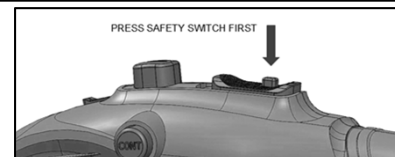

Ignition Sequence

    1. Set the gas adjustment wheel to middle setting for the initial lighting of the torch function.
2. Slide the child safety switch forward and press the ignition button simultaneously. It may take two or three tries before the torch ignites. Each try will require sliding the child safety switch forward and pressing the ignition button
3. For continuous flame, press the continuous use button before releasing the ignition button.
4. To adjust the intensity of the flame, use the gas adjustment wheel.
5. To shut the torch off, press the ignition button again and this will cut off the gas supply and extinguish the flame.

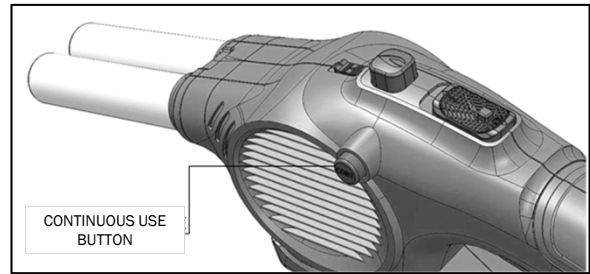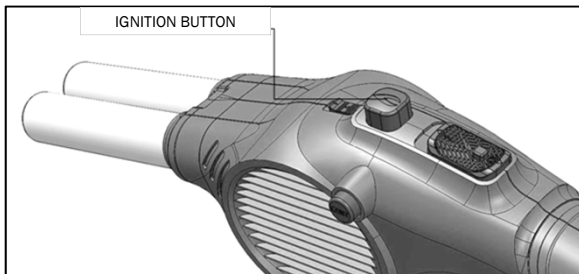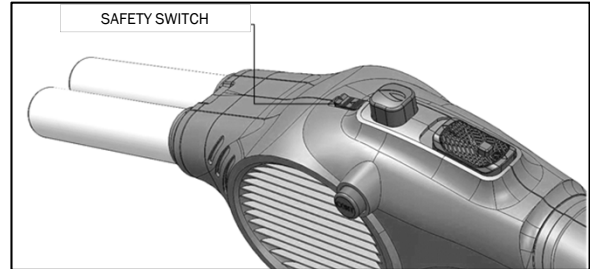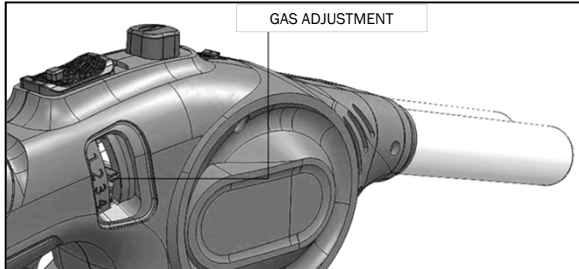

DANGER



- This tool gets very HOT and can cause severe burns. When using, touch the handle only.
- DO NOT touch flame guard while in use or until sufficient time has passed for cooling.
- DO NOT immerse heated parts or item in water, allow to cool naturally.
- DO NOT store in a temperature exceeding 100°F.
- Keep away from eyes at all times.
- The tool is not a toy. KEEP AND STORE OUT OF REACH OF CHILDREN.
- ADEQUATE VENTILATION must be used at all times.
- Use only butane gas in the tool. DO NOT use propane gas or any other types of fluids.
- The flame on this tool is nearly invisible in bright light or sunlight. DO NOT store or use gas or other flammable vapors or liquids in the vicinity of this tool.
- To prevent fires, keep the tool and tool holder away from all combustible materials.

WARNING



- Make sure that the gas flow is turned OFF when not in use.
- Allow to cool to room temperature before placing the tool in storage (allow 1-2 hours).
- "This appliance and all combustion appliances produce chemicals including carbon monoxide known to the State of California to cause cancer, birth defects, and other reproductive harm. For more information go to www.P65Warnings.ca.gov."
- Department of Transportation Hazardous Material Regulations forbid the carriage of butane or other flammable gas products on a passenger aircraft. Do not pack this item or any other flammable gas item in any checked or carry-on baggage.

Click & Cook

DUAL NOZZLE BBQ LIGHTER & BLOWER

Model BT-3500
Made in Taiwan

Bella Tavola™
BUTANE POWERED CULINARY TOOLS by Wall Lenk

www.wlenk.com

LIGHTING INSTRUCTIONS



Wall Lenk Corporation

PO Box 3349
252-527-4186

Kinston, N.C. 28502-3349
Fax 252-527-4189